

# Remote Display



Display Overview . . . . .Page 3

## Screen Layouts

Road Mode . . . . .	Page 6
Rally Mode . . . . .	Page 7
Regularity Mode . . . . .	Page 8
Jogularity Mode . . . . .	Page 9
Stage Mode . . . . .	Page 10
Service Mode . . . . .	Page 11
Time Mode . . . . .	Page 12
Due Time Mode . . . . .	Page 13
Set Brightness . . . . .	Page 14

# Display Overview

## Summary



- The RaliTripp Remote Display is an optional extra for the RaliTripp tripmeter. The display is generally used to provide the driver with a simplified version of the current main mode display being used by the navigator, and apart from the driver being able to set the brightness of the display, the information is “read-only” and the display does not need to be touched.
- The display is supplied with a 1 metre cable terminated in a keyed 6-way Molex plug which is simply connected to the rear socket of the main RaliTripp tripmeter. **Only connect/disconnect the display when the main RaliTripp tripmeter is powered off.**
- No configuration of the main RaliTripp tripmeter is required to indicate that a Remote Display is connected/not-connected.
- When the main RaliTripp tripmeter is in a “Settings” mode, e.g. Set Rally Time, Calibration etc, the Remote Display shows the last main mode, e.g. Regularity, Stage etc, with live data, that was last used on the main tripmeter – this allows the driver to still see the main mode live data while the navigator is checking/setting the configuration of the main tripmeter.
- The colours for trip and stopwatch data used on the Remote Display are the same as those set up in the main RaliTripp tripmeter.

## Common items - screen headers (1)

Rally Time

Open "Set Brightness" screen


Current speed, averaged  
over last two seconds

Intermediate distance

Intermediate distance  
units

Total Distance

Total distance units

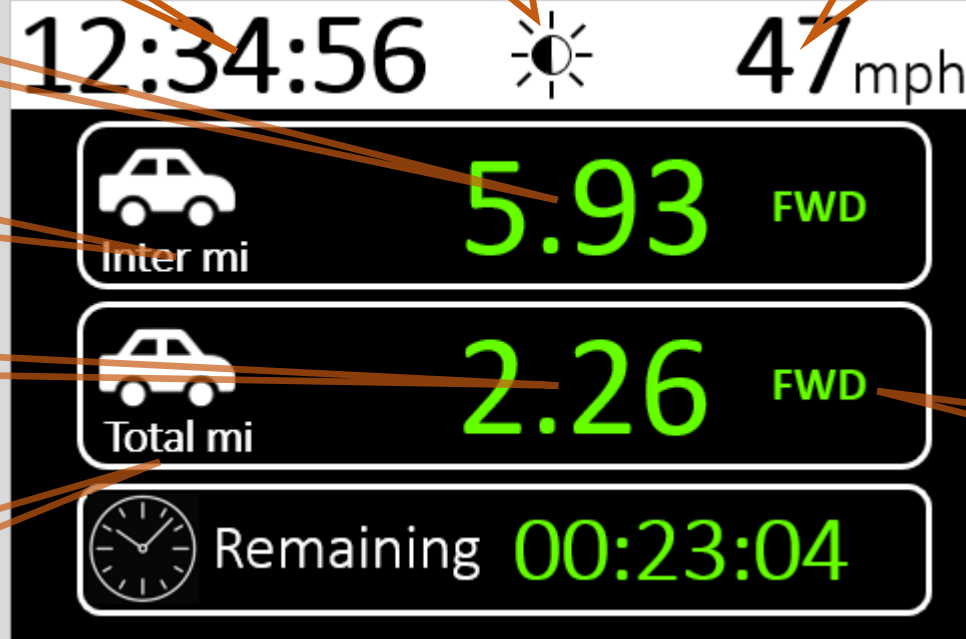


! Not shown if the main  
RaliTripp tripmeter is  
currently suppressing speed  
display

Current speed units

! Not shown if the main  
RaliTripp tripmeter is  
currently suppressing speed  
display


Trip distance direction

## Common items - screen headers (2)

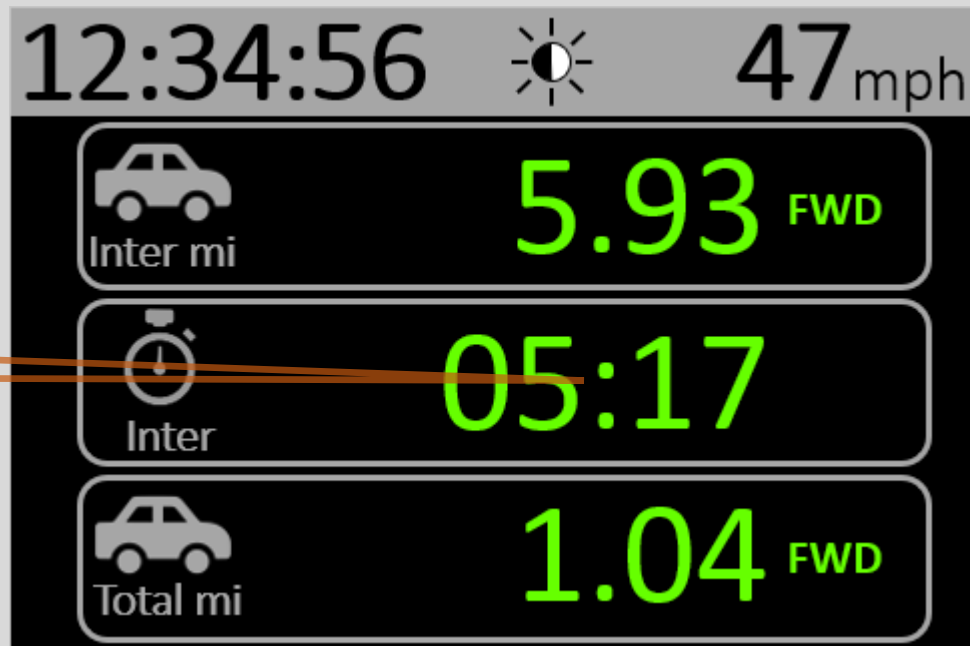

Intermediate stopwatch

# Remote Display Road Mode

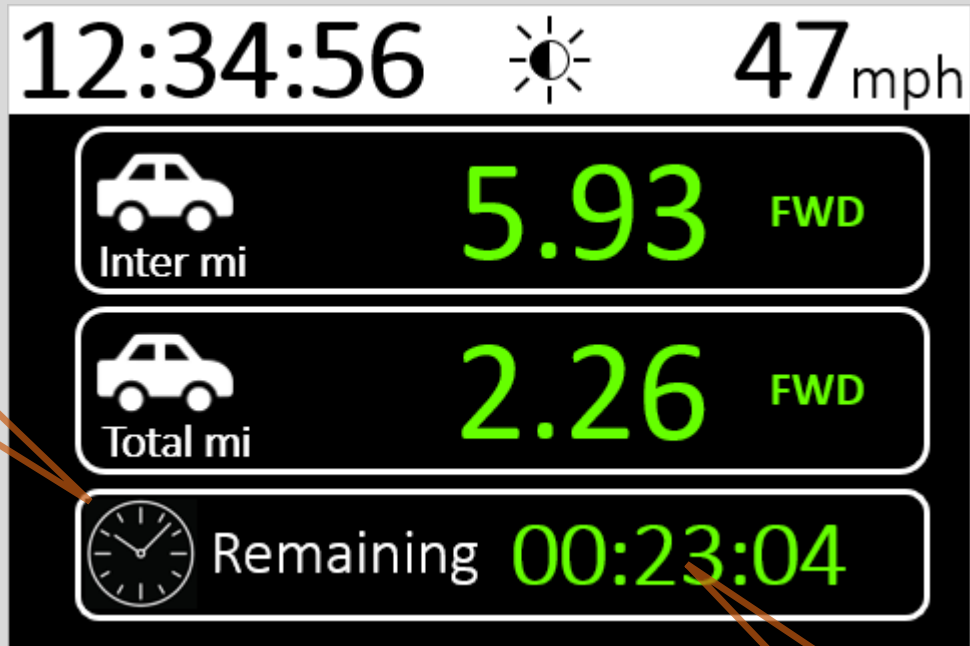


If there is no Due Time set on the main RaliTripp tripmeter, this panel is not shown

Time remaining before arrival at due time

# Remote Display Rally Mode



# Remote Display Regularity Mode

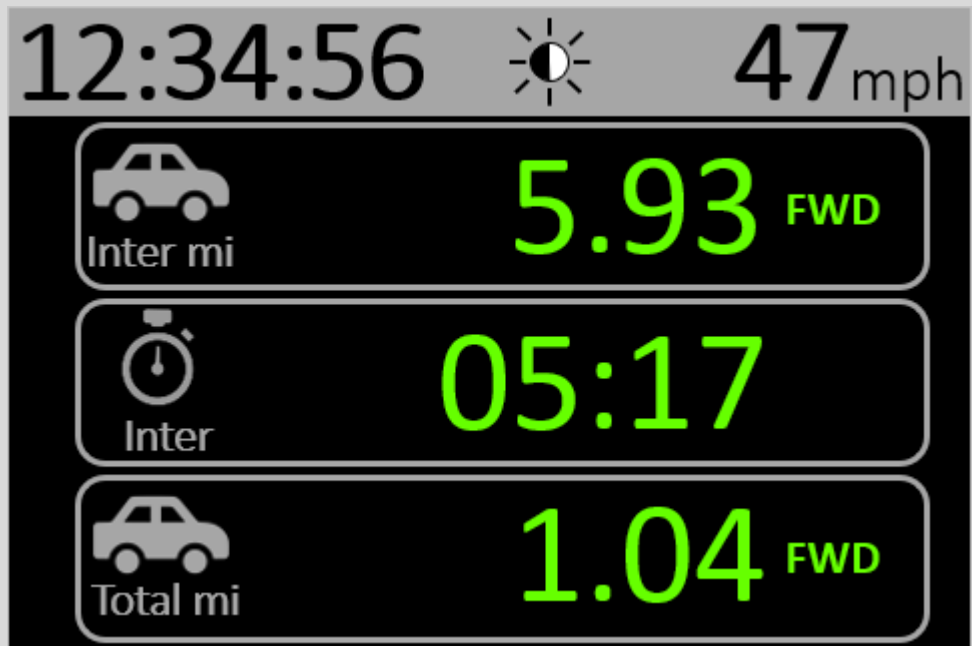

# Remote Display Jogularity Mode





# Remote Display Stage Mode



12:34:56 ☀ 47<sub>mph</sub>

Stage Distance 0.00  
Trip Direction Up

Start

12:34:56 ☀ 47<sub>mph</sub>

12

Waiting for 'Start At'

12:34:56 ☀ 47<sub>mph</sub>

Auto  
Start

Waiting for 'Auto Start'

12:34:56 ☀ 47<sub>mph</sub>

Total mi 2.82

Total 0:05:17

5.63

Stage in Progress

12:34:56 ☀ 47<sub>mph</sub>


Total mi 5.93

Total 0:05:17

Max Speed 63 mph

Stop Line

# Remote Display Service Mode

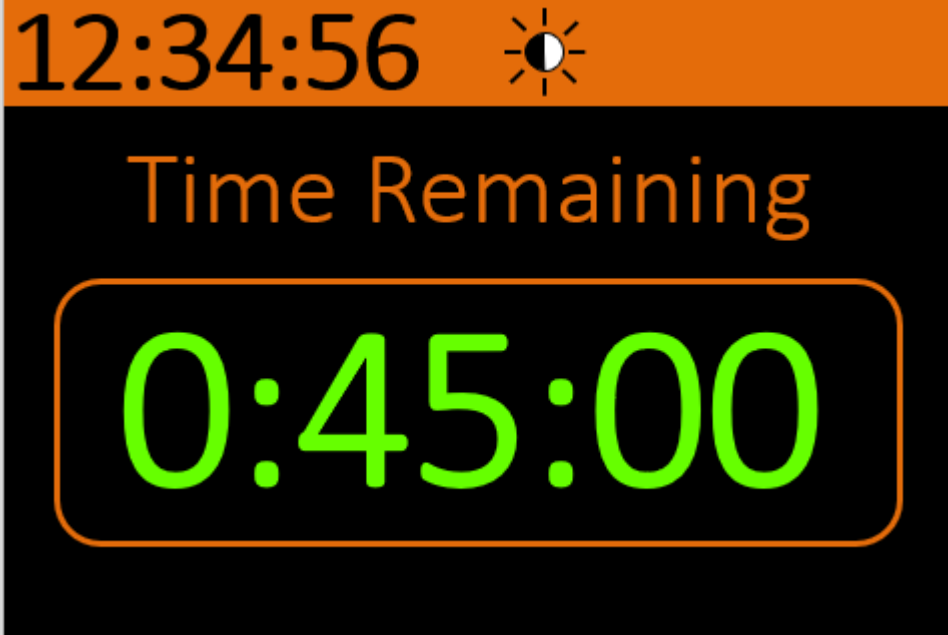




# Remote Display Time Mode




The image shows a digital display interface. At the top, a yellow horizontal bar contains a sun icon on the left and the text "47 mph" on the right. Below this bar is a large black rectangular area with a yellow border. Inside this black area, the time "12:34:56" is displayed in large, bright green digital characters.

# Remote Display Due Time Mode

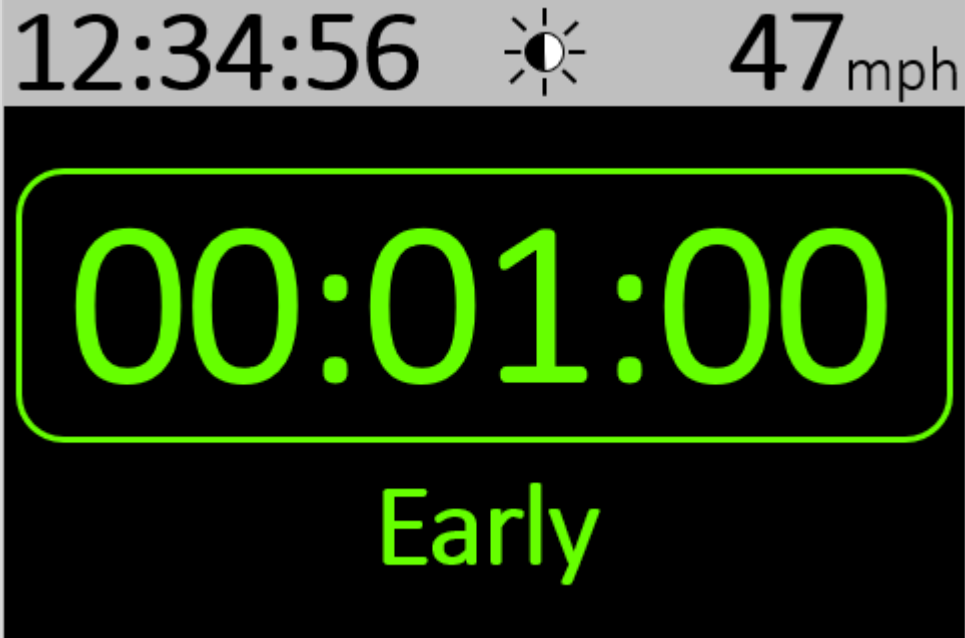

# Remote Display Set Brightness

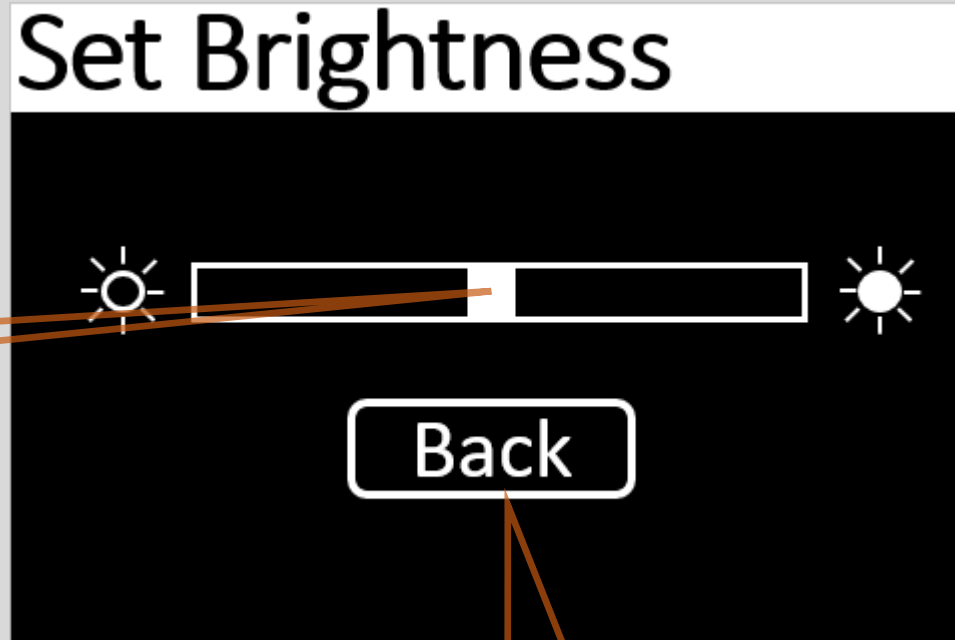

Click/slide to set screen  
brightness

Return to previous screen



# Notes



A series of horizontal dotted lines for writing notes, consisting of 18 rows of evenly spaced dots.

# RaliTripp Tripmeter

Road Mode

Rally Mode

Regularity Mode

Jogularity Mode

Stage Mode

Due Time Mode

Time Mode

Totals Mode

Service Mode

**It's a Navigator's Thing**